

Ritter®

Installation Instructions

Model 9A240 Exam Light
Used on Model 391 Otolaryngology Chair


KIT COMPONENTS

Part Number	Description	Qty.
	Light Arm Assembly	1
053-0789-01	Bushing, split snap	1
040-0010-66	Screw, #10-24 x 1"	3
041-0010-02	Nut, nyloc #10-24	3
015-1236-00	Light Bulb (12 VAC, 20 Watt).....	1
003-0892-00	Installation Instructions	1

REQUIRED TOOLS

3/8" open-end / box-end wrench
1/8" Allen Wrench

1

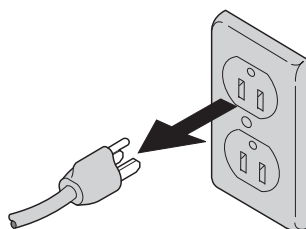


MA42000a



DANGER
Unplug chair from electrical outlet.


2

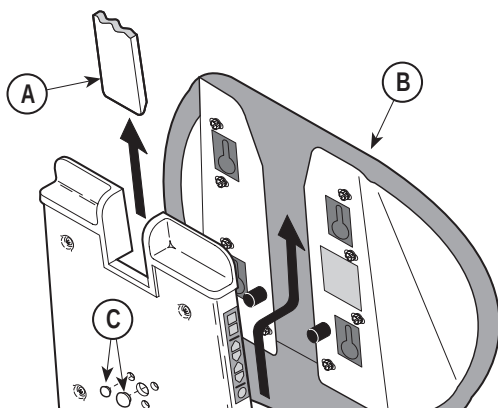

MA42000b

- A. Elevate headrest.
- B. Remove backrest upholstery section.
- C. Remove four cap plugs.


3

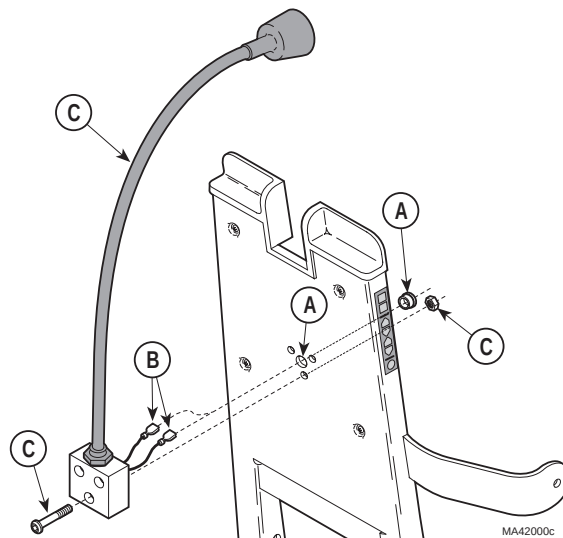

MA42000c

- A. Insert electrical leads through access hole.
- B. Insert split snap bushing in access hole.
- C. Secure light arm assembly to backrest with three screws and nuts.

4

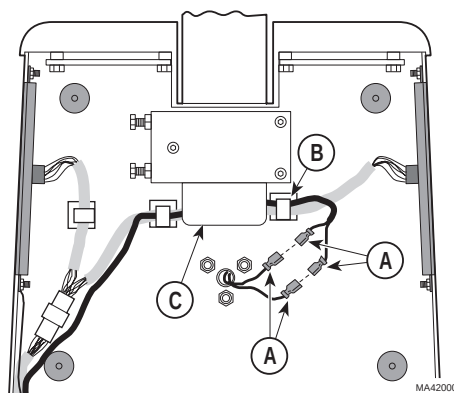

MA42000d

- A. Connect light electrical leads to chair leads.




DANGER

Assure electrical leads are positioned securely in wire clips, out of the way of headrest weldment. Failure to do so could result in electrical shock.

- B. Secure electrical leads in wire clips.
- C. Check to assure electrical leads **do not** contact headrest weldment when headrest is moved up and down.

Continued →

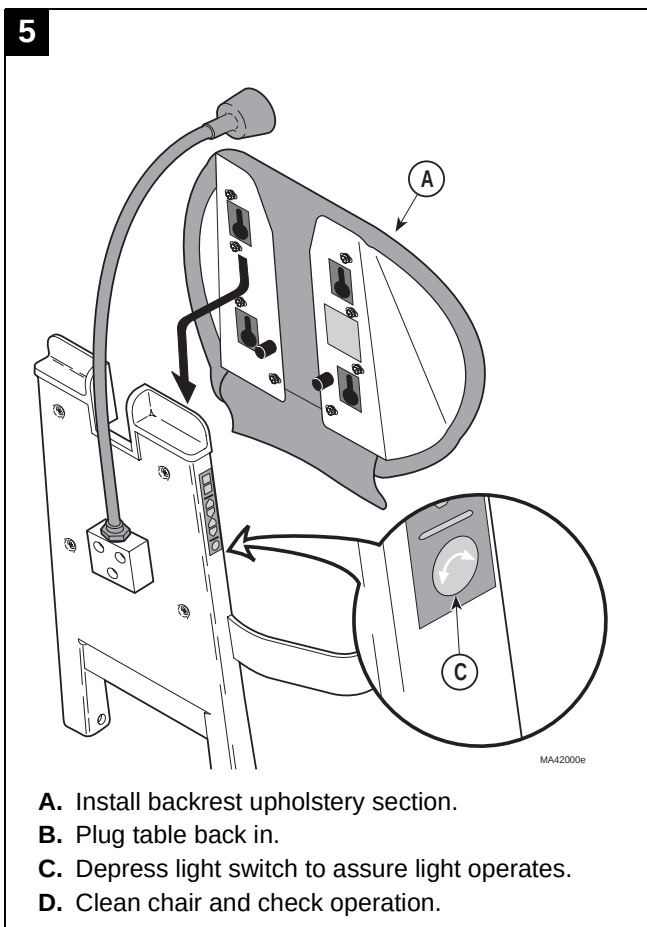

MIDMARK®

Midmark Corporation, Versailles, Ohio 45380 U.S.A.
(937) 526-3662 FAX (937) 526-5542

003-0892-00 Rev. B (1/98)